

(G) Heating Zone 2

It is possible to set 2 different flow temperature targets for 2 different heating zones. To do this Programmable Room Thermostats should be connected as shown in the Diagram. The Flow Temperature target for zone 1 is set using the CH temperature Knob, while the Flow Temperature target for Zone 2 is set using the boiler menu (see Frame 41). Note that if there is a demand from both zones at the same time then the higher target temperature will be used.

